


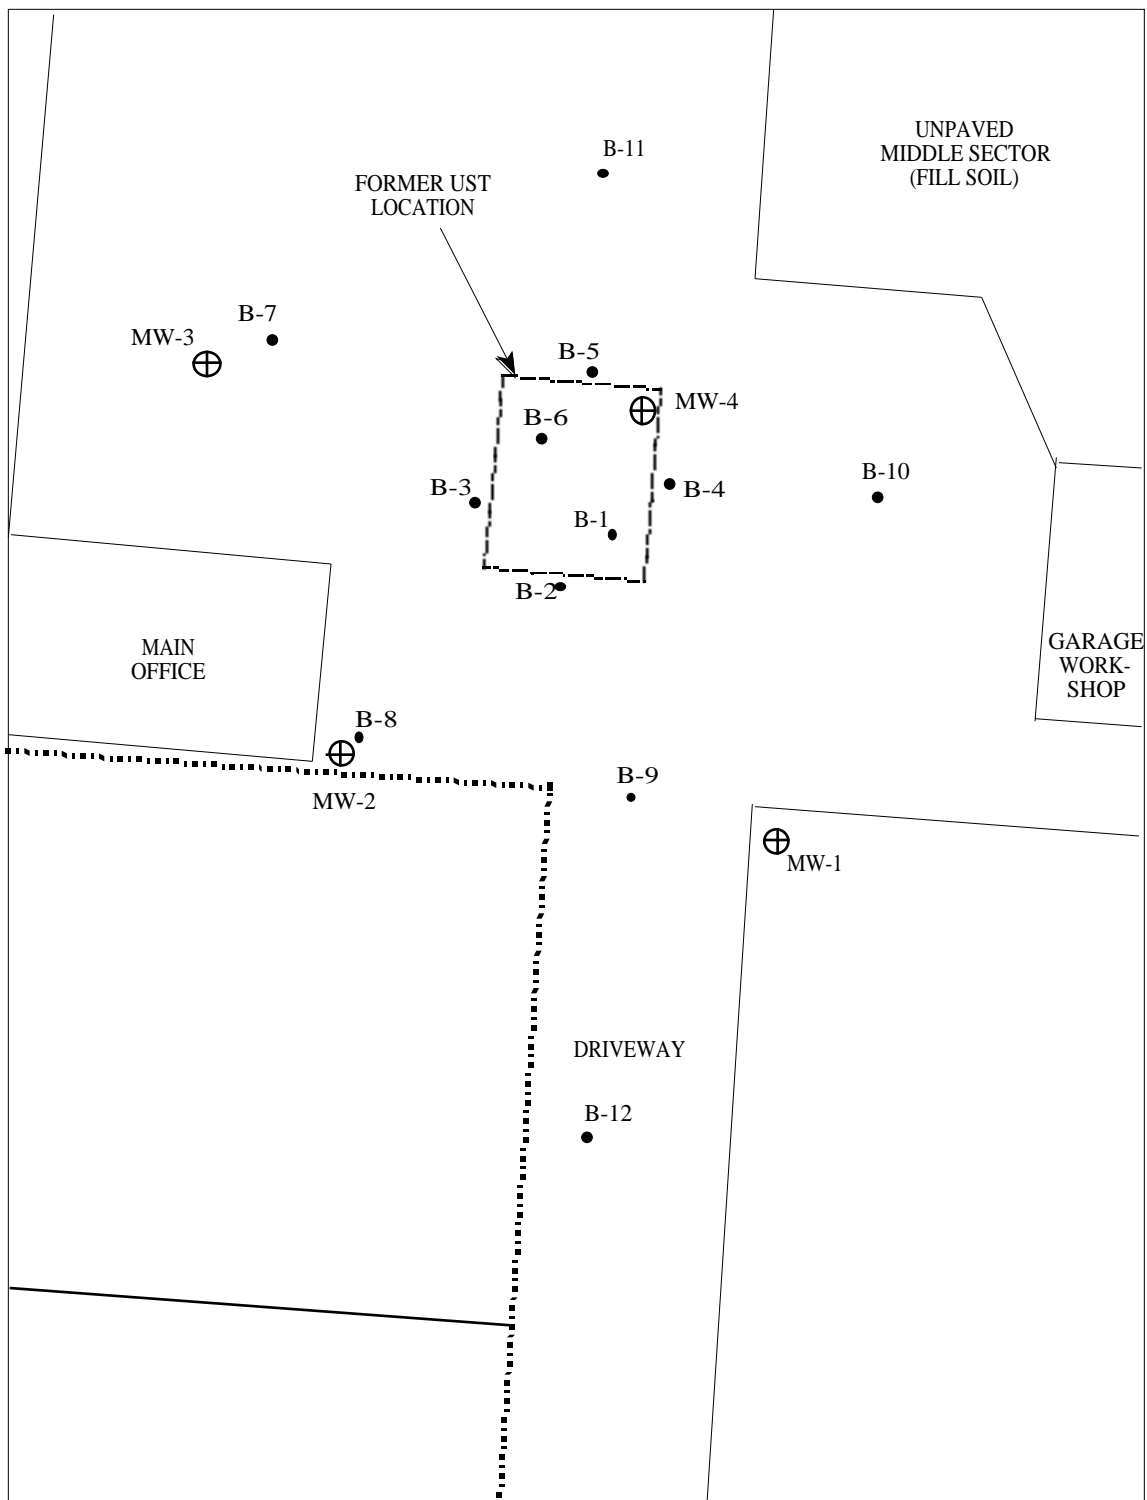

NORTH

SCALE
1" = 30'



LEGEND

- MW-2
⊕ Groundwater Monitoring Well
- B-9
● Soil Boring Location

SITE PLAN

McLeod Properties
Former Budway Trucking
1015 Chesley Avenue
Richmond, California

AQUA SCIENCE ENGINEERS, INC.

Figure 1